

READ & UNDERSTAND INSTRUCTIONS BEFORE PROCEEDING.

WARNING: FIRE HAZARD/ELECTRICAL HAZARD. THIS EQUIPMENT IS INTENDED TO BE INSTALLED ONLY BY QUALIFIED PERSONNEL. THE INSTALLATION MUST BE MADE IN ACCORDANCE WITH THE CURRENT EDITION OF THE NATIONAL ELECTRICAL CODE AND ALL APPLICABLE STATE AND LOCAL ELECTRICAL CODES. THE FINAL INSTALLATION MUST BE APPROVED BY THE APPROPRIATE, QUALIFIED ELECTRICAL/BUILDING INSPECTOR (S). IMPROPER INSTALLATION MAY RESULT IN A FIRE OR ELECTRICAL HAZARD.

INSTRUCTION SHEET 3SIS04-02 SHALLOW RECESSED

P/N: 3S-IS1004

1. ALWAYS DISCONNECT POWER BEFORE INSTALLATION AND/OR REMOVAL OF UNIT.
WARNING!! DO NOT CONNECT LED TO DRIVER WHILE DRIVER IS ENERGIZED.
DRIVER MUST BE LISTED FOR CLASS 2 OPERATION. MAX 350mA OUTPUT, CONSTANT CURRENT.
2. FOR DRIVER INSTALLATION INSTRUCTIONS, SEE DRIVER INSTRUCTION SHEET.
3. DETERMINE MOUNTING LOCATION FOR LED LUMINAIRE.
4. DRILL MOUNTING HOLE (2-11/16" MIN. - 3" MAX. DIA.).
WARNING!! MAX MATERIAL THICKNESS 3/4".
5. ROUTE LED LUMINAIRE WIRE THROUGH MOUNTING HOLE BACK TO DRIVER.
6. WARNING!! IMPROPER WIRING WILL DAMAGE LED.
CONNECT DRIVER OUTPUT WIRES TO LED FIXTURE WIRES
BLACK(-) TO BLACK(-), RED(+) TO RED(+) USING MALE
/FEMALE CONNECTORS AS SHOWN. WARNING!! FOR SERIES CONNECTIONS
SEE DRIVER INSTRUCTION SHEET FOR FURTHER DETAILS.

NOTE: IF DRIVER DOES NOT HAVE MALE/FEMALE CONNECTORS,
CUT AND STRIP WIRES FROM LUMINAIRE AND WIRE BLACK(-) TO BLACK(-),
RED(+) TO RED(+) USING WIRE NUTS ACCORDING TO DRIVER
WIRING INSTRUCTIONS.

7. TO MOUNT LUMINAIRE, ROTATE SPRINGS UPWARD INTO MOUNTING HOLE.
CONTINUE PUSHING LUMINAIRE INTO MOUNTING HOLE UNTIL SPRINGS PULL
LUMINAIRE INTO FINAL POSITION.
8. TURN POWER ON TO FIXTURE.

